




● Dual Flush Valve Flush installation

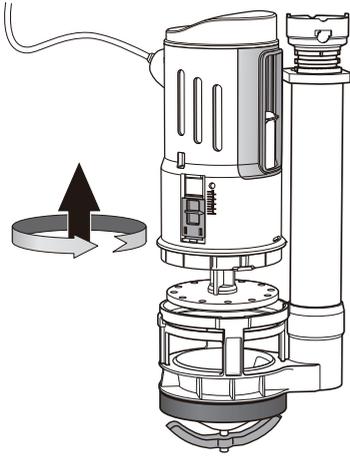


1. Hold the base of the flush valve and rotate the body counterclockwise take it out from base.

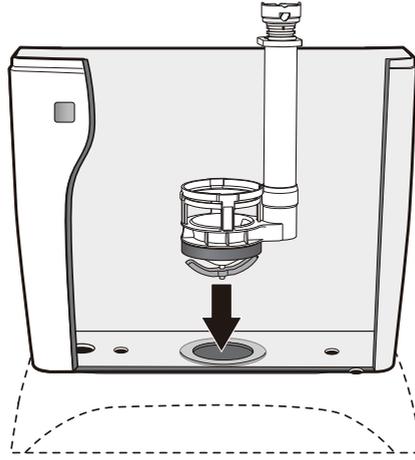


2. Put the base into the ceramic hole.

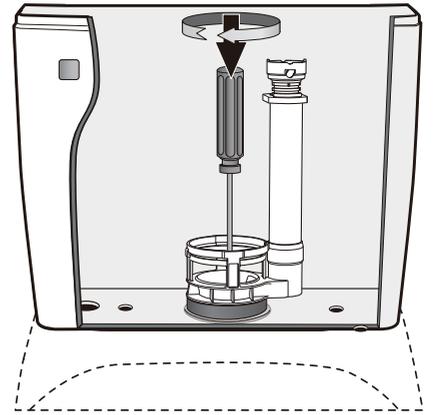


3. Use screwdriver to screw up the nut tightly.

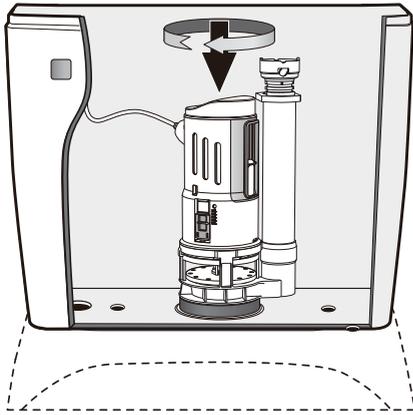


4. Take the body of flush valve and set it into the base and lock in place by rotating it clockwise.

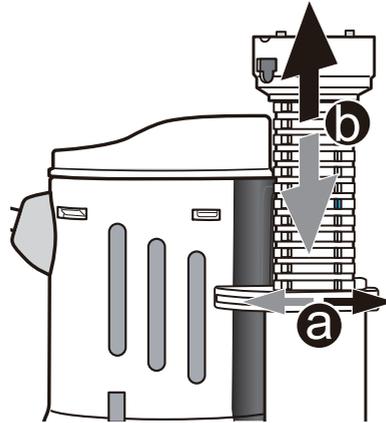

5. To adjust the height of the overflow pipe, slide the lock (a), then set the desired height of the overflow pipe (b). Put the lock back after.

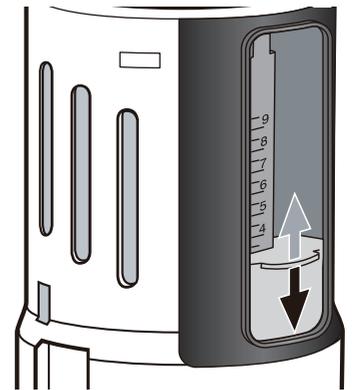


6. Adjust the half flush volume by sliding the marked part up or down. When the buoy is higher, the discharge water volume is less. Slide down the part can buoy little until you are flushing enough water.

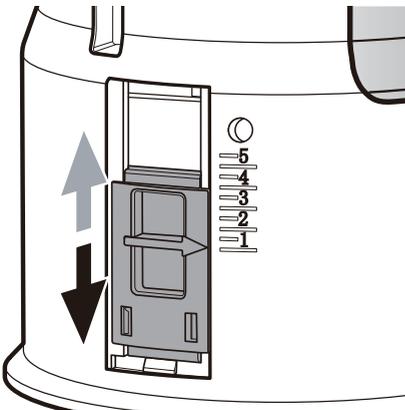


7. Adjust the full flush volume by sliding the red part up or down. When the buoy is higher, the discharge water volume is less. Slide down the part can buoy little until you are flushing enough water.


● **Flush handle installation**

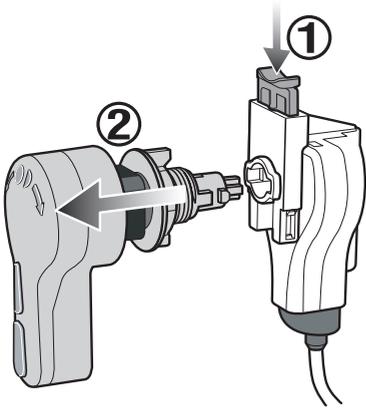


1. Push in the blue button which is on the flush handle switch box and then pull handle out.

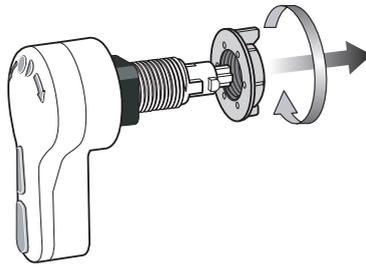


2. Unscrew the flanged nut from the handle body and remove the square seal.

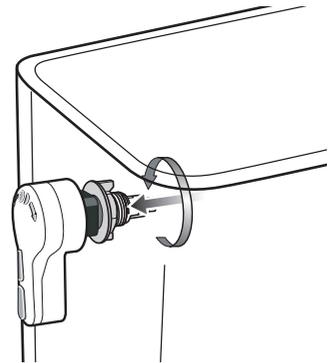


3. Insert the seal into the square hole on the water tank (fits only one way).

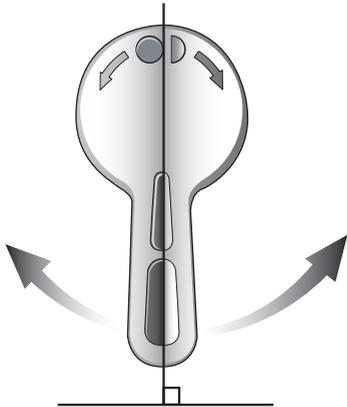

4. Make sure the handle is in vertical position, it swings left and right approx. 90 degree.

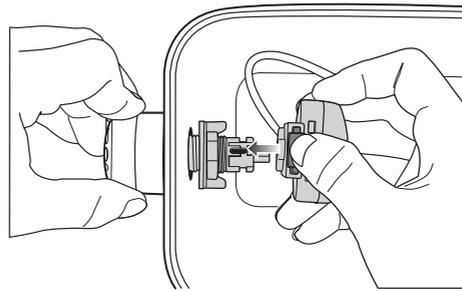

5. **Important!!!** Align the grooves on the handle mechanism in vertical position (see picture).

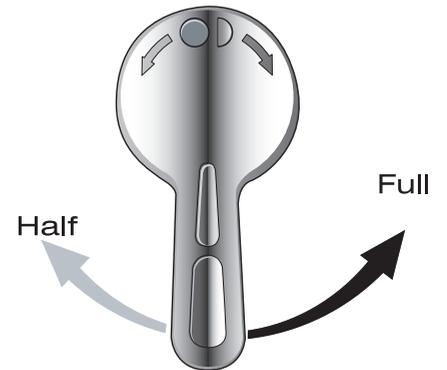

6. The left is half flush, the right is full flush.