



# VIB Installation instructions

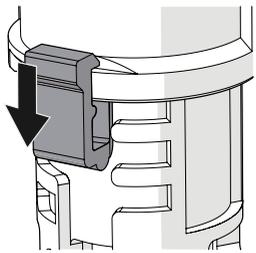


1. Loose lock buckle down.




2. Rotate to loosen the adjustable pipe.

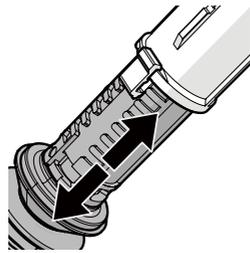


3. Pull adjustable pipe up and down until adjusting to the suitable height.

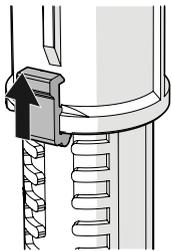


4. Push up into the buckle to the locked position.

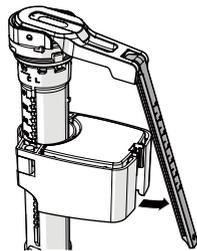


5. Pull outward the float rod.

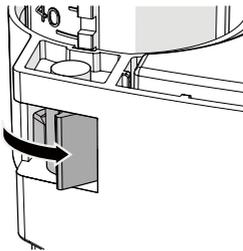


6. Rotate the buoy of lock buckle.

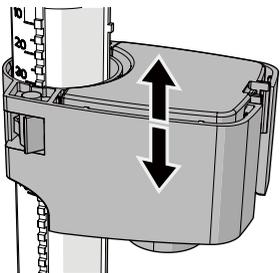


7. Pull the buoy up and down until adjusting to the suitable height.

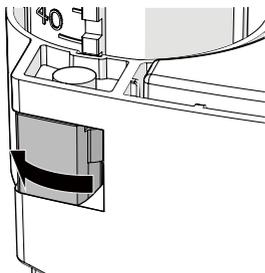


8. Turn the lock buckle to the locked position.

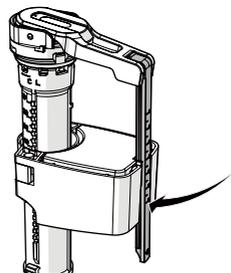


9. Inward to lock the float lever to lock.

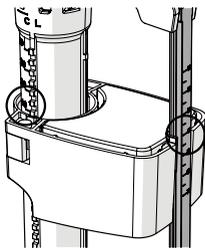


10. **ATTENTION:** After adjusting the body's scale value, please keep it the same as the scale value on the float rod.

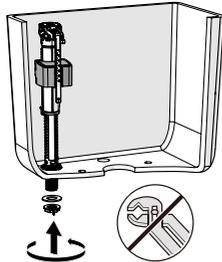


11. Install the fill valve into tank, rotate the gasket and nut.

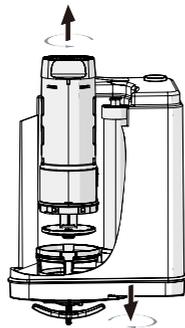


12. Take the body out from base.

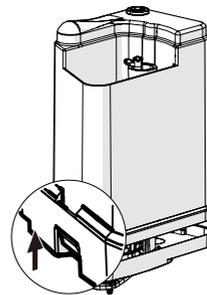


13. Take the tank body out from the base.

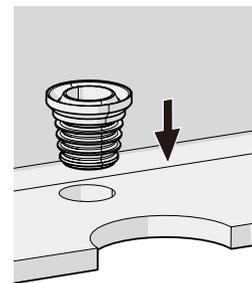


14. Install the tower-shape gasket into the tank hole.

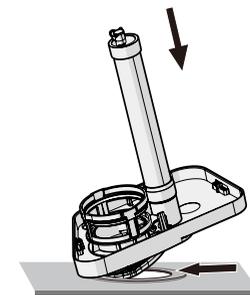


15. Position flush valve base into the mounting hole.

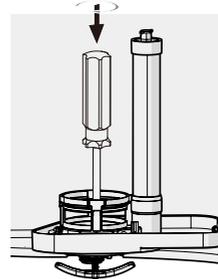


16. Position the base into the ceramic hole. use screwdriver to screw up the nut tightly.

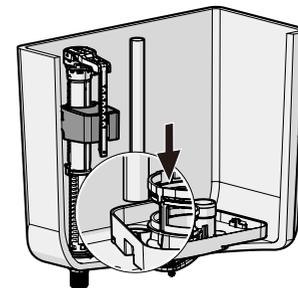


17. Insert the pipe into the tank hole. Remarks: The pipe should be inserted to the bottom of the tower-shape gasket.

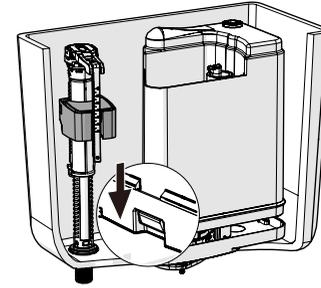


18. Position the tank body onto the base.

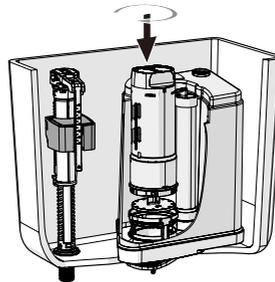


19. Position the valve body into the base and lock it in place by rotating it clockwise.

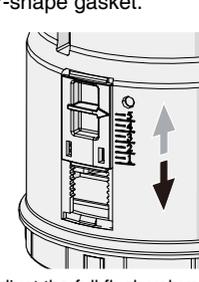


20. Adjust the full flush volume by sliding the buoy up or down. When the buoy is higher, the water is less and the flush time is shorter. Slide the buoy down little by little until you are flushing enough water to clean the bowl.

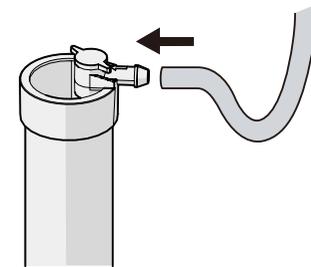


21. Attach the refill tube to the overflow pipe for refill.

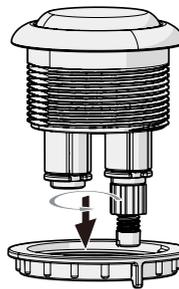

22. Screw the fixed nut clock-wise.

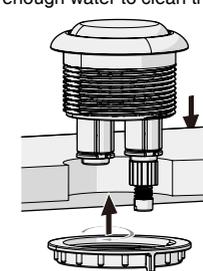

23. Position the button body into the ceramic hole. Make sure the button rod aim at the full-flush part, screw up the bottom nut tightly.

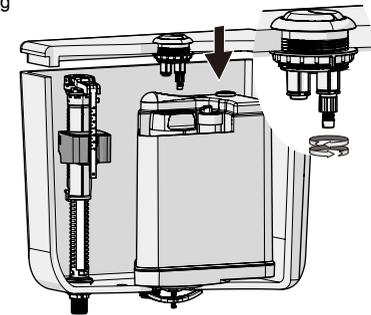

24. Position the ceramic tank cover onto the tank. Remarks: Loosen the nut, adjust the rod to the suitable length, screw up the bottom nut tightly.